

Trunk Ring Programming for the Prostar 816 Key Telephone System

Programming trunk ring pattern

From display phone:

Dial # key to enter programming
[PROGRAMMING] is displayed

Dial 20 to enable system programming
[MMC DISABLED] is displayed

Dial Administrator Passcode (normal default = 1234)
[MMC ENABLED] is displayed

Dial # to end programming
Display returns to normal

Then:

Dial # key to enter programming
[PROGRAMMING] is displayed

Dial 62 to enable ring programming
[DAY RING ASSIGN] is Displayed

Press the desired C.O. line button
[LINE X:] is momentarily displayed (X is the line number selected)
[4] is displayed (default setting)

Press the button of each station that is to ring for this line
Display will show stations selected

Dial # to exit programming
Display returns to normal

Call line to verify ring pattern